SV8100 - DIAL A STATION SPEED DIAL NUMBER

- 1. Press the **Speaker** key.
- Dial #7 (default Service Code).
 Note: To preselect, press a Line key in Step 1 (instead of Speaker).
- 3. Dial the Station Speed Dial buffer nunmber (0~9):
 - 1 = Station Speed Dial buffer 1
 - 2 = Station Speed Dial buffer 2
 - :: 0 = Station Speed Dial buffer 10