

SV8100 - DIAL A SYSTEM SPEED DIALING NUMBER

1. Press the **Speaker** key.
2. Dial **#2** (default Service Code).

OR Press the Redial key.

OR

Press the **System Speed Dialing** key (Service Code 751:27).

3. Dial the Station Speed Dial buffer number (Default: 000~999).
The stored number dials out.